

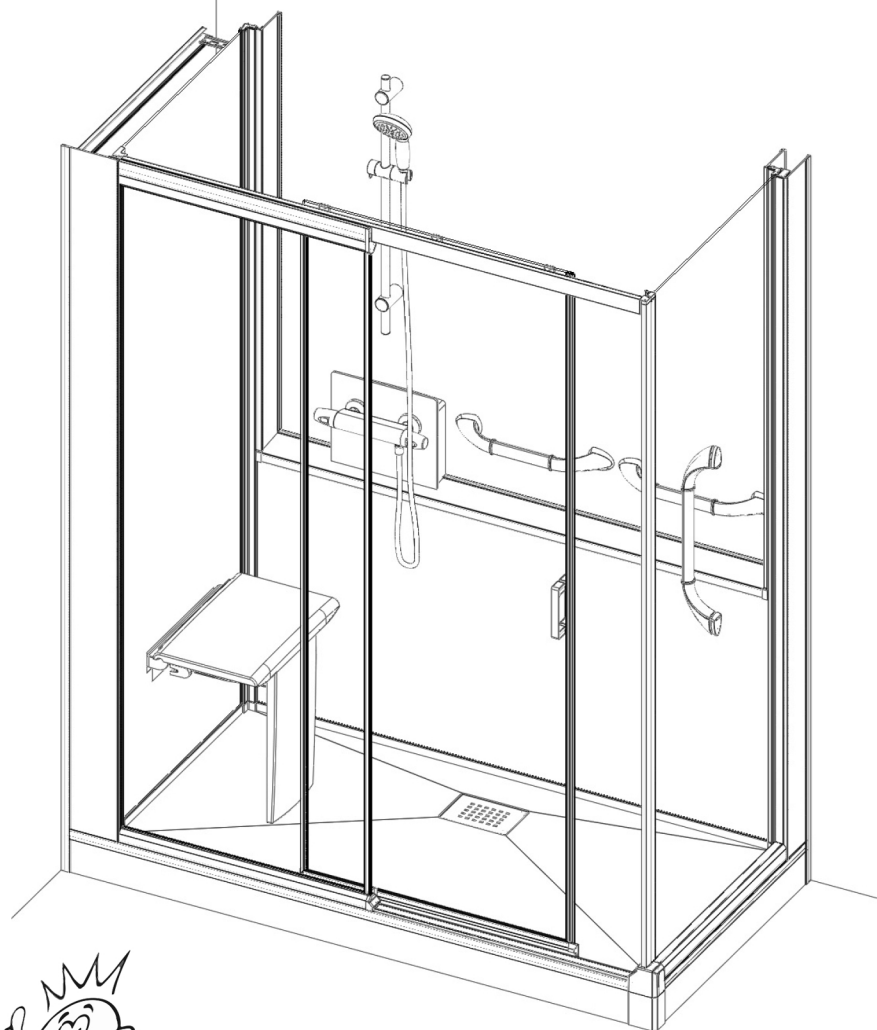
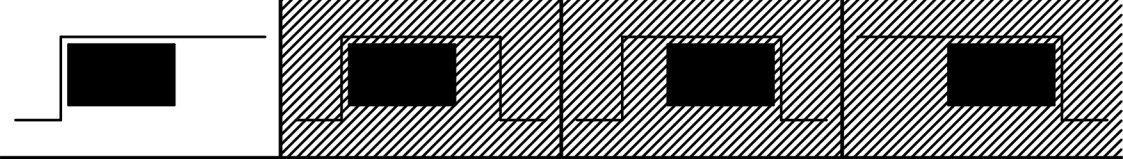


● Position de la cabine ● Position of the shower cubicle
 ● Posición de la cabina de ducha ● Posizione della cabina doccia
 ● Positie van de douchecabine ● Position der Duschkabine




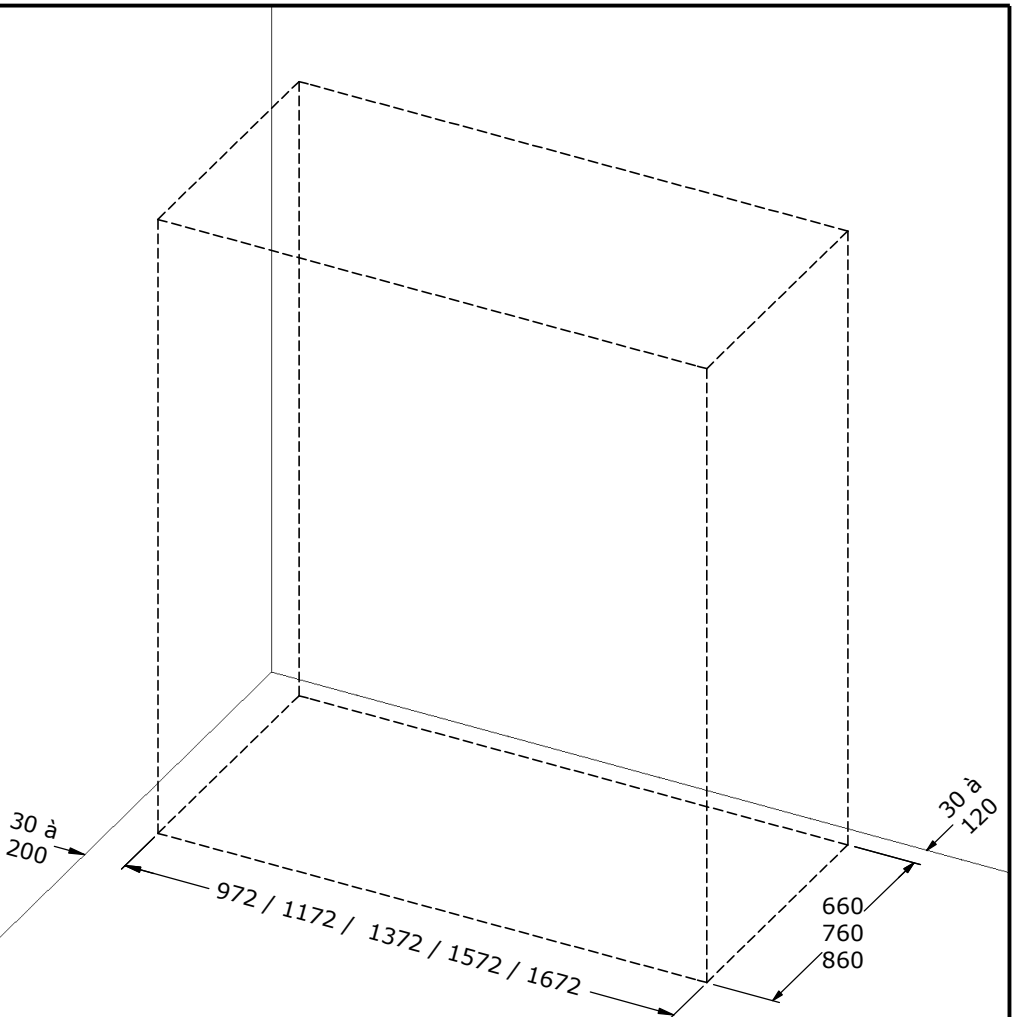


● Cotes en mm ● Dimensions in mm ● Cotas en mm
 ● Quote in mm ● Afmetingen in mm ● Maße sind in mm angegeben


































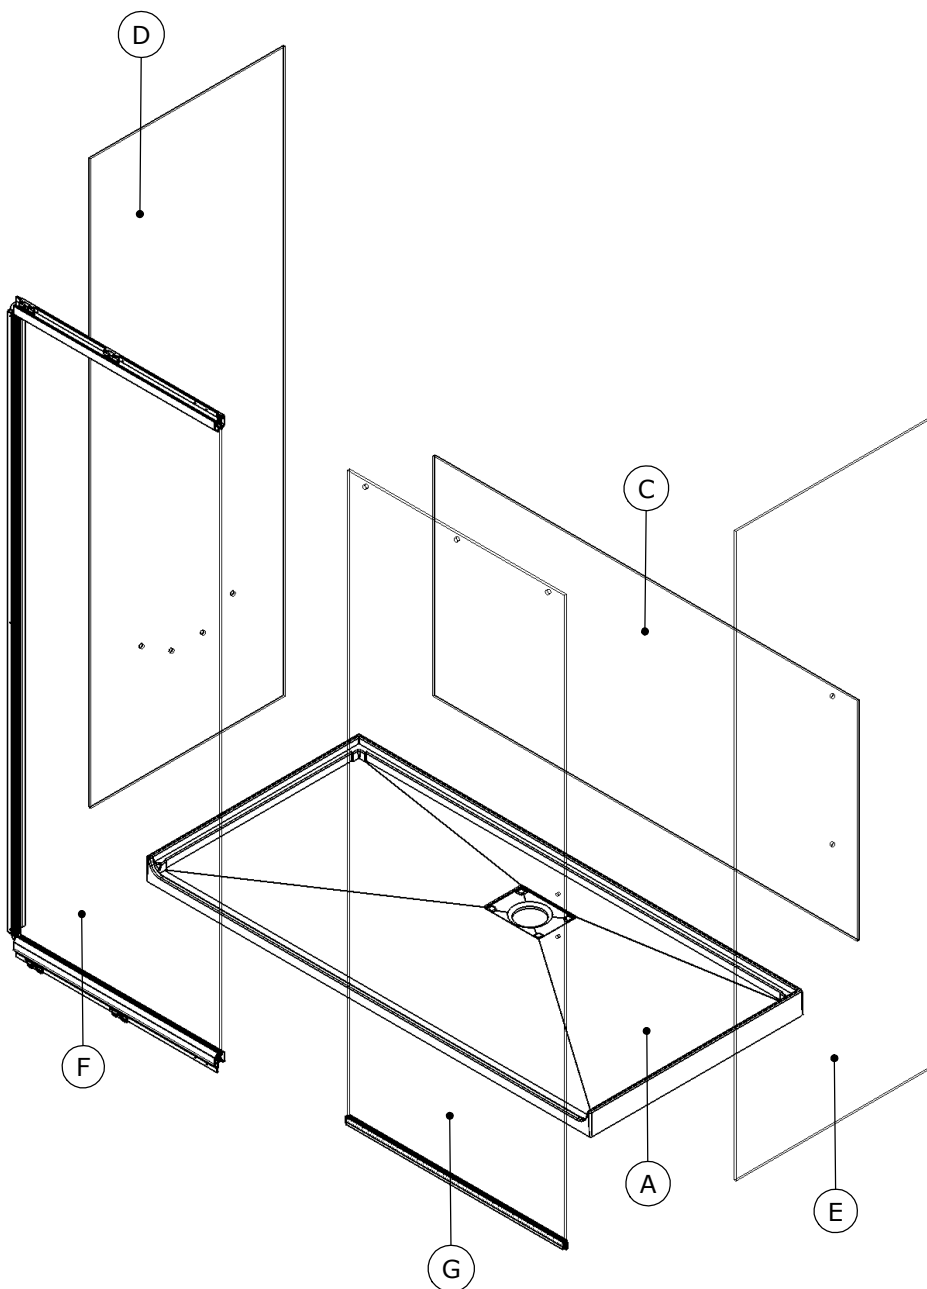


- CODE COLIS (Voir repères en page 4)
- PACKAGE CODES (See marks on page 4)
- REF. BULTOS (Ver pg. 4 para listado de bultos)
- CODE SET (zie blz. 4)
- Codering verpakking (zie omschrijving op pagina 4)
- PAKETCODES (siehe Kennzeichnungen auf Seite 4)













REP	VERSION	100 x 70	100 x 80	100 x 90	120 x 70	120 x 80	120 x 90	140 x 70	140 x 80	140 x 90	160 x 70	160 x 80	160 x 90	170 x 70	170 x 80	170 x 90
A		REC561	REC562	REC563	REC564	REC565	REC566	REC567	REC568	REC569	REC570	REC571	REC572	REC573	REC574	REC575
C		C11422E			C11423E			C11424E			C11425E			C11426E		
D		C11444E	C11445E	C11446E	C11444E	C11445E	C11446E	C11444E	C11445E	C11446E	C11444E	C11445E	C11446E	C11444E	C11445E	C11446E
E	SER	C11363E	C11364E	C11365E	C11363E	C11364E	C11365E	C11363E	C11364E	C11365E	C11363E	C11364E	C11365E	C11363E	C11364E	C11365E
	TN	C11357E	C11358E	C11359E	C11357E	C11358E	C11359E	C11357E	C11358E	C11359E	C11357E	C11358E	C11359E	C11357E	C11358E	C11359E
F	SER	C11374E			C11375E			C11376E			C11377E			C11378E		
	TN	C11369E			C11370E			C11371E			C11372E			C11373E		
G	SER	C11394E			C11395E			C11396E			C11397E			C11398E		
	TN	C11389E			C11390E			C11391E			C11392E			C11393E		

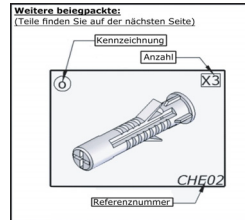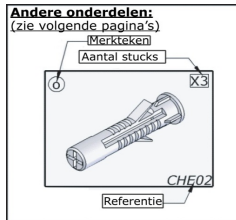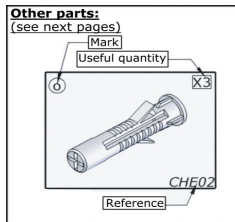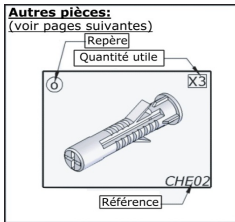

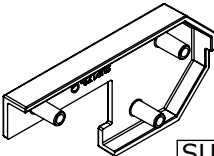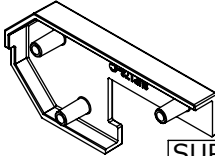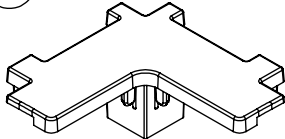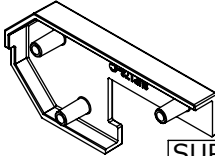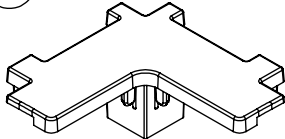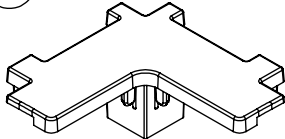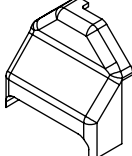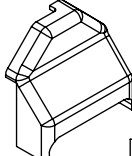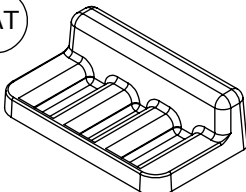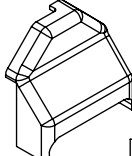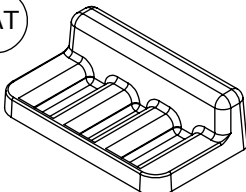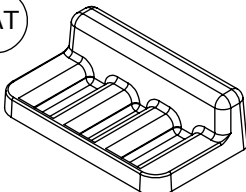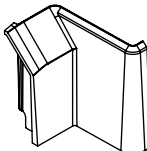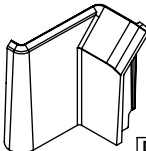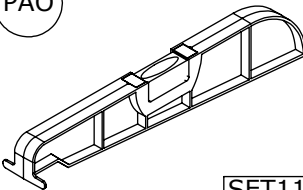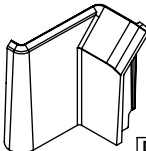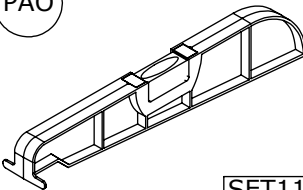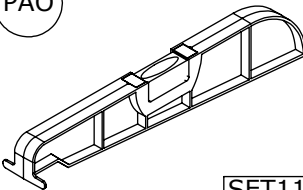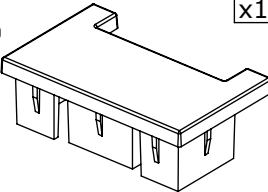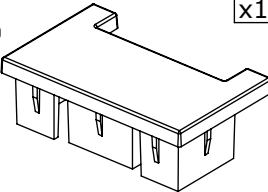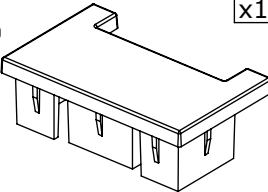
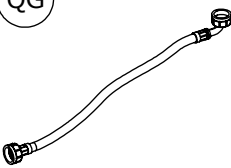
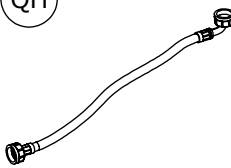
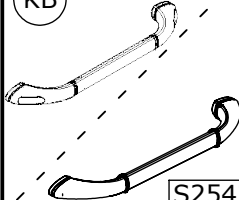
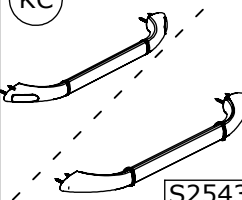
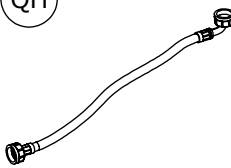
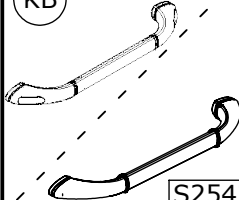
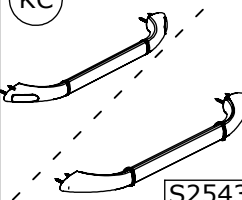
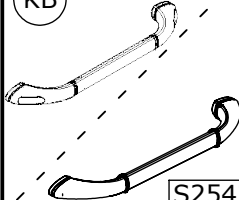
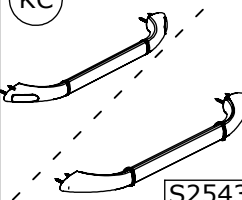
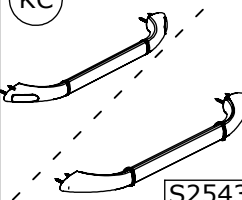


●Montage gauche●Left hand ●Montaje a la izquierda ●Montaggio a sinistra ●Montage links●Montage links SK  SUP172 x1 <td> ●Montage droite●Right hand ●Montaje a la derecha ●Montaggio a destra ●Montage rechts●Montage rechts SL  SUP173 x1 <td> PS  PPL1116 x2 </td></td>	●Montage droite●Right hand ●Montaje a la derecha ●Montaggio a destra ●Montage rechts●Montage rechts SL  SUP173 x1 <td> PS  PPL1116 x2 </td>	PS  PPL1116 x2	
●Montage gauche●Left hand ●Montaje a la izquierda ●Montaggio a sinistra ●Montage links●Montage links SC  SUP164 x1 <td> ●Montage droite●Right hand ●Montaje a la derecha ●Montaggio a destra ●Montage rechts●Montage rechts SD  SUP165 x1 <td> PAT  PPL1141 x1 </td></td>	●Montage droite●Right hand ●Montaje a la derecha ●Montaggio a destra ●Montage rechts●Montage rechts SD  SUP165 x1 <td> PAT  PPL1141 x1 </td>	PAT  PPL1141 x1	
●Montage gauche●Left hand ●Montaje a la izquierda ●Montaggio a sinistra ●Montage links●Montage links PG  PPL1102 x1 <td> ●Montage droite●Right hand ●Montaje a la derecha ●Montaggio a destra ●Montage rechts●Montage rechts PH  PPL1103 x1 <td> PAO  SET119 x1 </td></td>	●Montage droite●Right hand ●Montaje a la derecha ●Montaggio a destra ●Montage rechts●Montage rechts PH  PPL1103 x1 <td> PAO  SET119 x1 </td>	PAO  SET119 x1	
●Montage gauche●Left hand ●Montaje a la izquierda ●Montaggio a sinistra ●Montage links●Montage links PAB  PPL1134 x1 <td> ●Montage droite●Right hand ●Montaje a la derecha ●Montaggio a destra ●Montage rechts●Montage rechts PAC  PPL1135 x1 <td> PU  PPL1118 x1 </td></td>	●Montage droite●Right hand ●Montaje a la derecha ●Montaggio a destra ●Montage rechts●Montage rechts PAC  PPL1135 x1 <td> PU  PPL1118 x1 </td>	PU  PPL1118 x1	
QG  TUY60 x1 <td> QH  TUY61 x1 <td> KB  S2542 KIT121 x1 <td> KC  S2543 KIT122 x2 </td></td></td>	QH  TUY61 x1 <td> KB  S2542 KIT121 x1 <td> KC  S2543 KIT122 x2 </td></td>	KB  S2542 KIT121 x1 <td> KC  S2543 KIT122 x2 </td>	KC  S2543 KIT122 x2

1

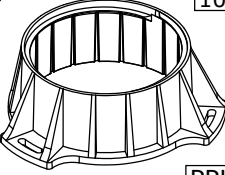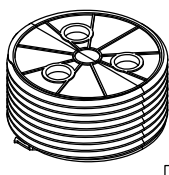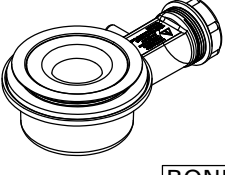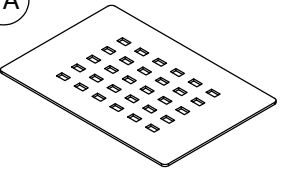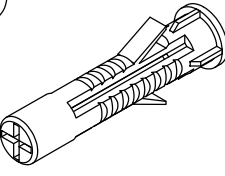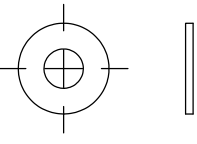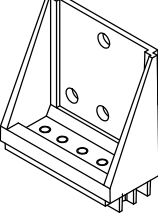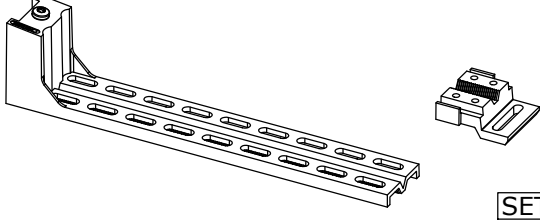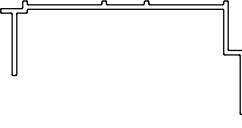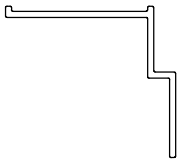
PA 120/140/160/170 x11 100 x9  PPL802	PB 120/140/160/170 x11 100 x9  PPL804	QA x1  BOND28
TA x1  TOL11	VN Ø4 x13  45 1=1 VIS231	
VA x13  CHE02	VV x13  RON34	VS x2  EQU78
VT x2  SET111		VR M4 x8  12 1=1 VIS239
AV x2  Lg=1890mm 6211-01	AU x1  Lg=1940mm 6210-01	

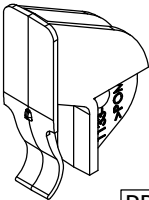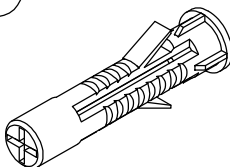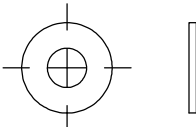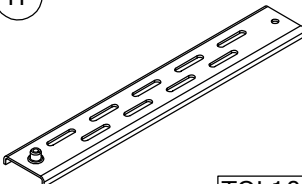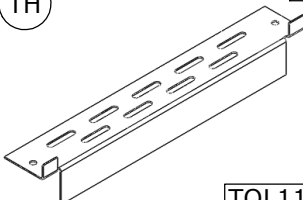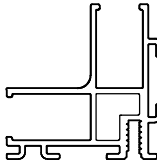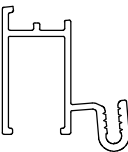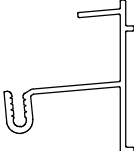

(PAA)  x3 PPL1133	(VN)  Ø4 x5 45 1=1 VIS231																
(VA)  x5 CHE02	(VV)  x5 RON34 (VQ)  Ø4.2 x8 9,50 1=1 VIS238																
(TF)  x3 TOL103	(TH)  x2 TOL113 (JG)  x2 Lg=1971mm P101																
(AA)  x2 Lg=1972mm 6189-01	(AY)  x1 <table border="1"> <thead> <tr> <th colspan="2">6200</th> </tr> <tr> <th>Longueur</th> <th>Length</th> </tr> <tr> <th>Lunghezza</th> <th>Länge</th> </tr> </thead> <tbody> <tr> <td>100</td> <td>Lg=855mm</td> </tr> <tr> <td>120</td> <td>Lg=1053mm</td> </tr> <tr> <td>140</td> <td>Lg=1253mm</td> </tr> <tr> <td>160</td> <td>Lg=1453mm</td> </tr> <tr> <td>170</td> <td>Lg=1553mm</td> </tr> </tbody> </table>	6200		Longueur	Length	Lunghezza	Länge	100	Lg=855mm	120	Lg=1053mm	140	Lg=1253mm	160	Lg=1453mm	170	Lg=1553mm
6200																	
Longueur	Length																
Lunghezza	Länge																
100	Lg=855mm																
120	Lg=1053mm																
140	Lg=1253mm																
160	Lg=1453mm																
170	Lg=1553mm																
(JK)  x2 Lg=709mm P108	(AS)  x1 <table border="1"> <thead> <tr> <th colspan="2">6209</th> </tr> <tr> <th>Longueur</th> <th>Length</th> </tr> <tr> <th>Lunghezza</th> <th>Länge</th> </tr> </thead> <tbody> <tr> <td>100</td> <td>Lg=835mm</td> </tr> <tr> <td>120</td> <td>Lg=1035mm</td> </tr> <tr> <td>140</td> <td>Lg=1235mm</td> </tr> <tr> <td>160</td> <td>Lg=1435mm</td> </tr> <tr> <td>170</td> <td>Lg=1535mm</td> </tr> </tbody> </table>	6209		Longueur	Length	Lunghezza	Länge	100	Lg=835mm	120	Lg=1035mm	140	Lg=1235mm	160	Lg=1435mm	170	Lg=1535mm
6209																	
Longueur	Length																
Lunghezza	Länge																
100	Lg=835mm																
120	Lg=1035mm																
140	Lg=1235mm																
160	Lg=1435mm																
170	Lg=1535mm																

AT

x1

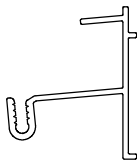

6209

● Largeur ● Width ● Ancho
● Larghezza ● Breedte ● Breite


70 Lg=635mm

80 Lg=735mm

90 Lg=835mm

TE


x2

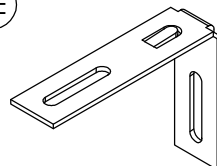

TOL102

VR

x1



PFL77

● Longueur ● Length ● Largo
● Lunghezza ● Lengte ● Länge

100 Lg=853mm

120 Lg=1051mm

140 Lg=1251mm


160 Lg=1451mm

170 Lg=1551mm

VR

M4


x2



12

1=1


VIS239



VQ

Ø4.2

x3




9,50

1=1

VIS238

JG

x1




Lg=1971mm

P101

AC

x1




Lg=1944mm

6192-01

AP

x1

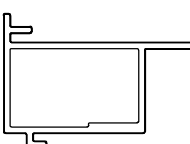


Lg=1952mm

6205-01














AI


x1

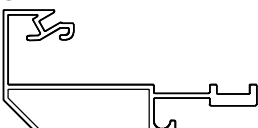


6198	
• Largeur • Width • Ancho	
• Larghezza • Breedte • Breite	
70	Lg=567mm
80	Lg=667mm
90	Lg=767mm


4

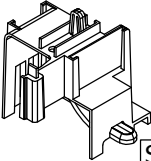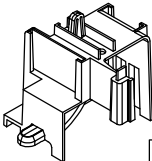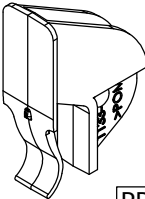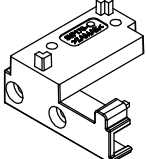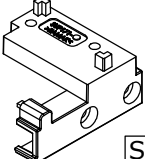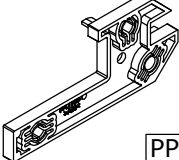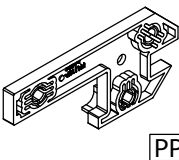SA ● Montage gauche ● Left hand ● Montaje a la izquierda ● Montaggio a sinistra ● Montage links ● Montage links  SET107 x1	SB ● Montage droite ● Right hand ● Montaje a la derecha ● Montaggio a destra ● Montage rechts ● Montage rechts  SET108 x1	VM $\varnothing 3.5$  19 1=1 VIS215 x8
PI ● Montage gauche ● Left hand ● Montaje a la izquierda ● Montaggio a sinistra ● Montage links ● Montage links  PPL1104 x1	PJ ● Montage droite ● Right hand ● Montaje a la derecha ● Montaggio a destra ● Montage rechts ● Montage rechts  PPL1105 x1	PAA  PPL1133 x1
SI ● Montage gauche ● Left hand ● Montaje a la izquierda ● Montaggio a sinistra ● Montage links ● Montage links  SUP170 x1	SJ ● Montage droite ● Right hand ● Montaje a la derecha ● Montaggio a destra ● Montage rechts ● Montage rechts  SUP171 x1	JG  Lg=1971mm P101 x1
PK ● Montage gauche ● Left hand ● Montaje a la izquierda ● Montaggio a sinistra ● Montage links ● Montage links  PPL1106 x1	PL ● Montage droite ● Right hand ● Montaje a la derecha ● Montaggio a destra ● Montage rechts ● Montage rechts  PPL1107 x1	QC  BUT22 x1
VP $\varnothing 3.5$  9,50 1=1 VIS237 x3		













AG		6196		x1
		● Longueur ● Length ● Largo	● Lunghezza ● Lengte ● Länge	
		100	Lg=880mm	
		120	Lg=1080mm	
		140	Lg=1280mm	
		160	Lg=1480mm	
		170	Lg=1580mm	

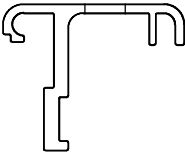AD		6194		x1
		● Longueur ● Length ● Largo	● Lunghezza ● Lengte ● Länge	CLT
		100	Lg=456mm	
		120	Lg=556mm	
		140	Lg=656mm	
		160	Lg=756mm	
		170	Lg=806mm	















AJ		6199		x1
		● Longueur ● Length ● Largo	● Lunghezza ● Lengte ● Länge	CLT
		100	Lg=401mm	
		120	Lg=501mm	
		140	Lg=601mm	
		160	Lg=701mm	
		170	Lg=751mm	



AQ	x2
	
Lg=300mm	6206-01

5

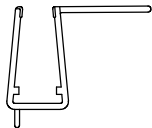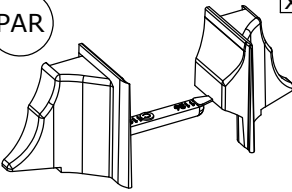
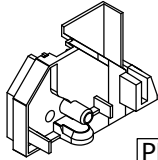
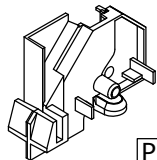
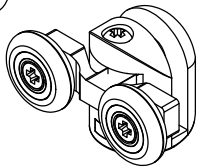


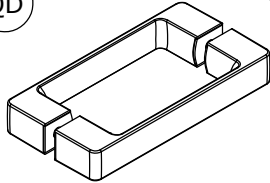
JE x1  Lg=820mm PPL1239	PC x1  PPL823	JC x1  Lg=1882mm J723
PAR x1  PPL1136/1137	JB x1  Lg=1959mm AI150	VM Ø3.5 x1  19 1=1 VIS215
PO x1 ● Montage gauche ● Left hand ● Montaje a la izquierda ● Montaggio a sinistra ● Montage links ● Montage links  PPL1110	PP x1 ● Montage droite ● Right hand ● Montaje a la derecha ● Montaggio a destra ● Montage rechts ● Montage rechts  PPL1111	QE x2  ROU19
JA x1  Lg=1975mm AI113	JD x1  Lg=1894mm J719	QD x1  PGN36

6

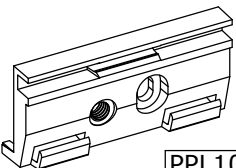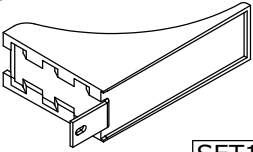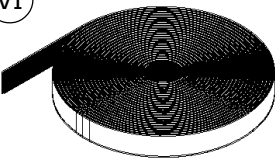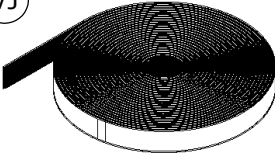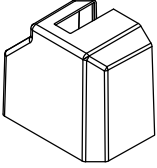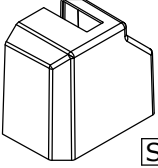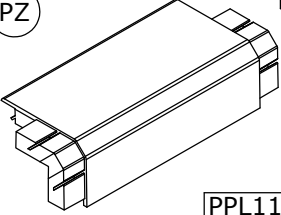
VQ $\varnothing 4.2$ x6  1=1 VIS238	PF 140/160/170 x4 100/120 x3  PPL1099	VO $\varnothing 3.5$ x12  1=1 VIS253
PAK 140/160/170 x8 100/120 x6  SET105	VI x3  Lg=2800mm VEL06-5	VJ x3  Lg=2800mm VEL06-6
SE x1 ● Montage gauche ● Left hand ● Montaje a la izquierda ● Montaggio a sinistra ● Montage links ● Montage links  SUP166	SF x1 ● Montage droite ● Right hand ● Montaje a la derecha ● Montaggio a destra ● Montage rechts ● Montage rechts  SUP167	JJ x2  Lg=2200mm PFL84
PZ x1  PPL1132	AE x1  Lg=2030mm 6195-01	AF x1  Lg=1005mm 6195-02
AH x2  Lg=1998mm 6197-01	FA x1  PUS132	

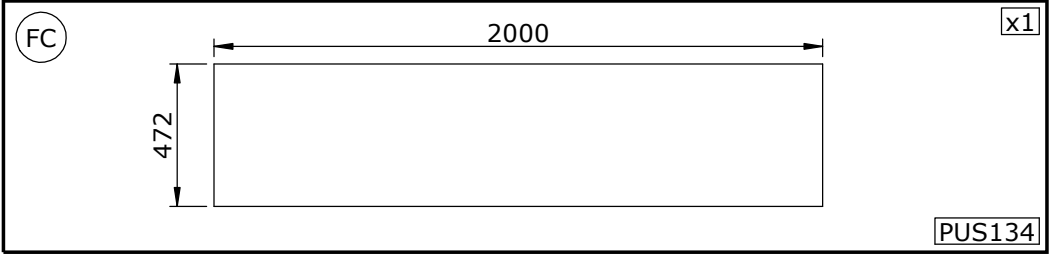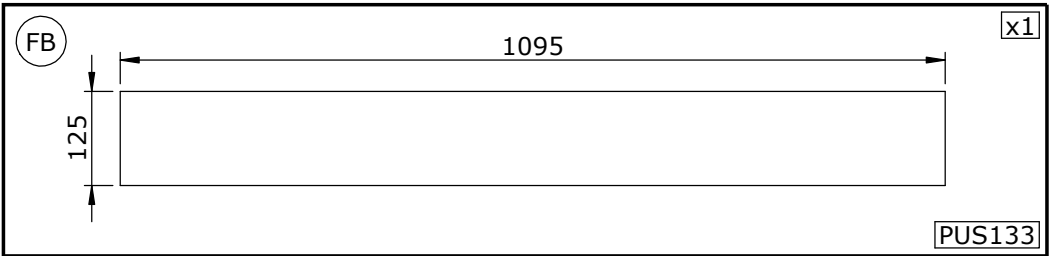

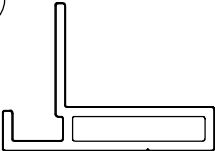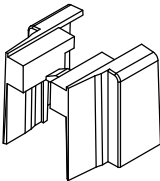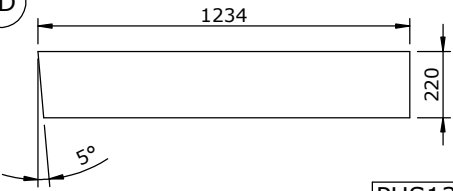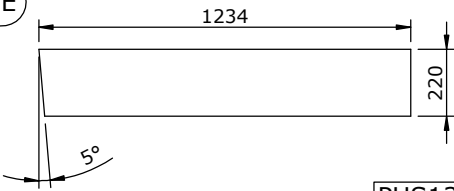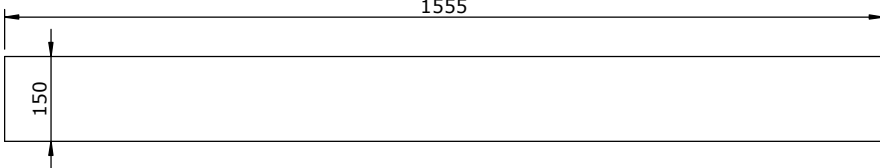


AN  Lg=1233.50mm 6203-01	JI  Lg=1231mm P105	PAP  PPL1123/1124 x1
AL  Lg=1805mm 6201-01 x1	AL  Lg=1230mm 6201-03 x2	
FD  PUS135 x1	FE  PUS136 x1	
FH  PAN11 x1		

8

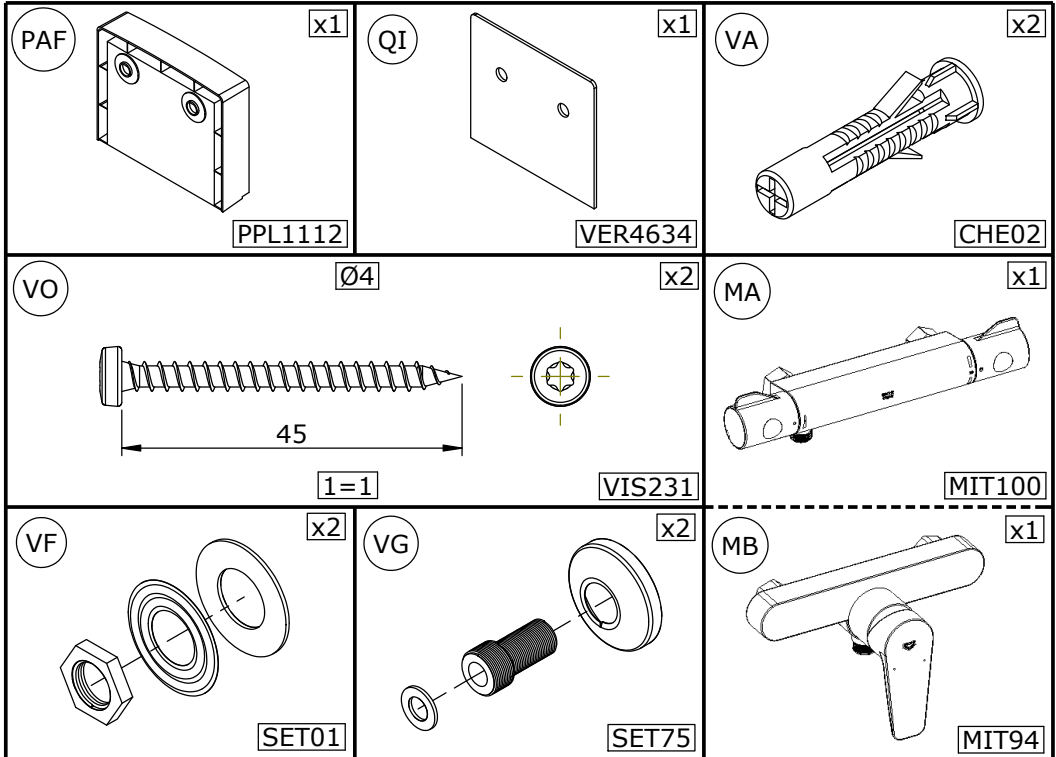



- Les quantités données sont les quantités utiles au montage. les sachets fournis contiennent des pièces supplémentaires.
- The quantities given are what are required for the installation. There may be some surplus in the package provide.
- Las cantidades indicadas son las cantidades necesarias para el montaje. Las bolsitas incluidas contienen piezas suplementarias.
- Le quantità fornite sono le quantità necessarie al montaggio. I sacchetti forniti contengono pezzi supplementari.
- De aangegeven aantallen zijn vereist voor de montage. De verpakking bevat extra onderdelen.
- Die Mengenangaben beziehen sich auf die für die Montage nötigen Teile. Eventuell weitere beige packte Teile ignorieren.



● Outillage nécessaire ● Tools required ● Equipamiento necesario
 ● Attrezzatura necessaria ● Benodigde gereedschap ● Werkzeuge erforderlich

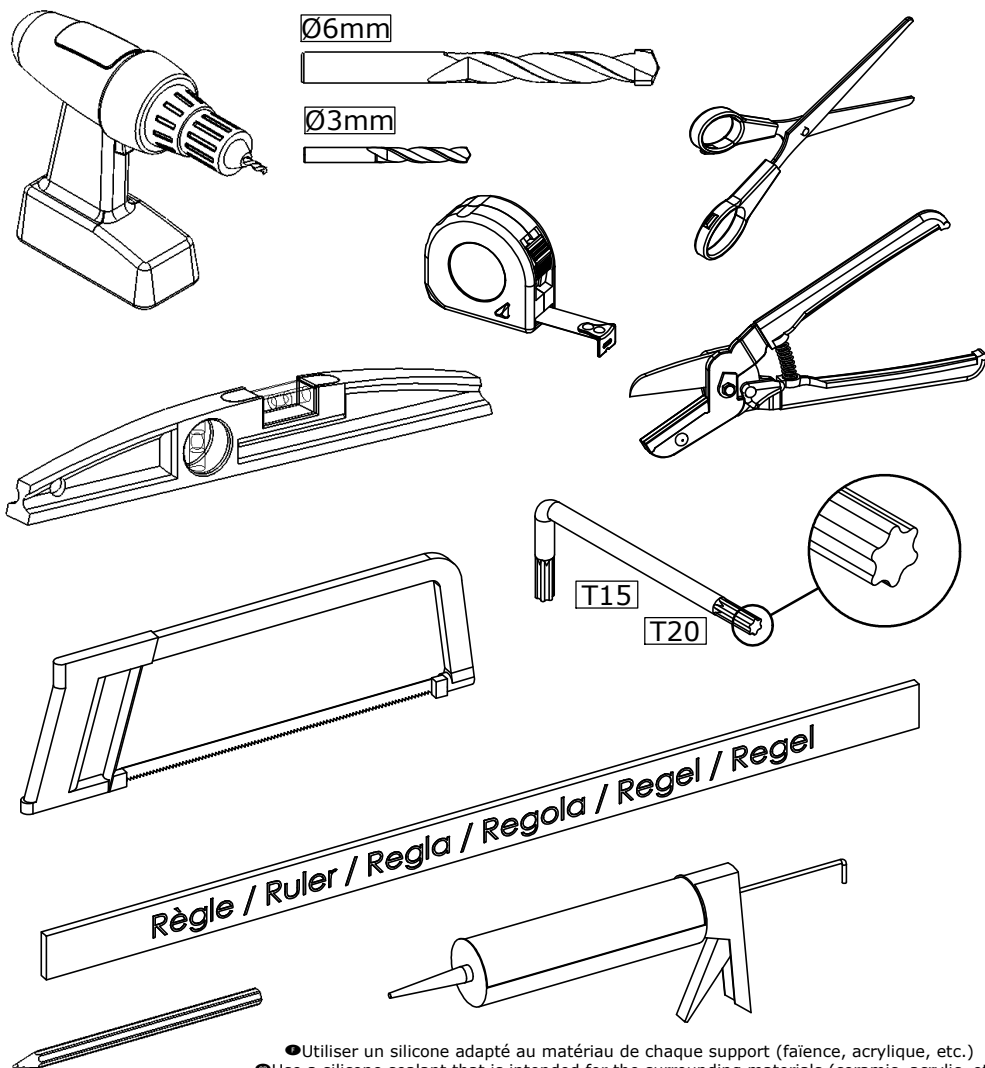


- Utiliser un silicone adapté au matériau de chaque support (faïence, acrylique, etc.)
- Use a silicone sealant that is intended for the surrounding materials (ceramic, acrylic, etc.)
- Usar una silicona adecuada para cada tipo de material (loza, acrílico, etc.)
- Utilizzare un silicone adatto a qualsiasi materiale (ceramica, acrilico, ecc.)
- Gebruik siliconenkit die geschikt is voor iedere ondergrond (tegelwerk, acryl, etc.)
- Für das jeweilige Trägermaterial (Stein, Acryl usw.) geeignetes Silikon verwenden.



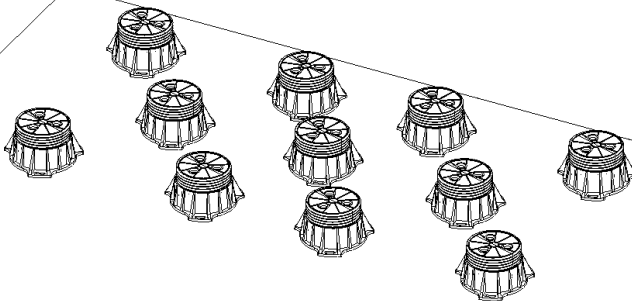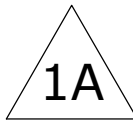


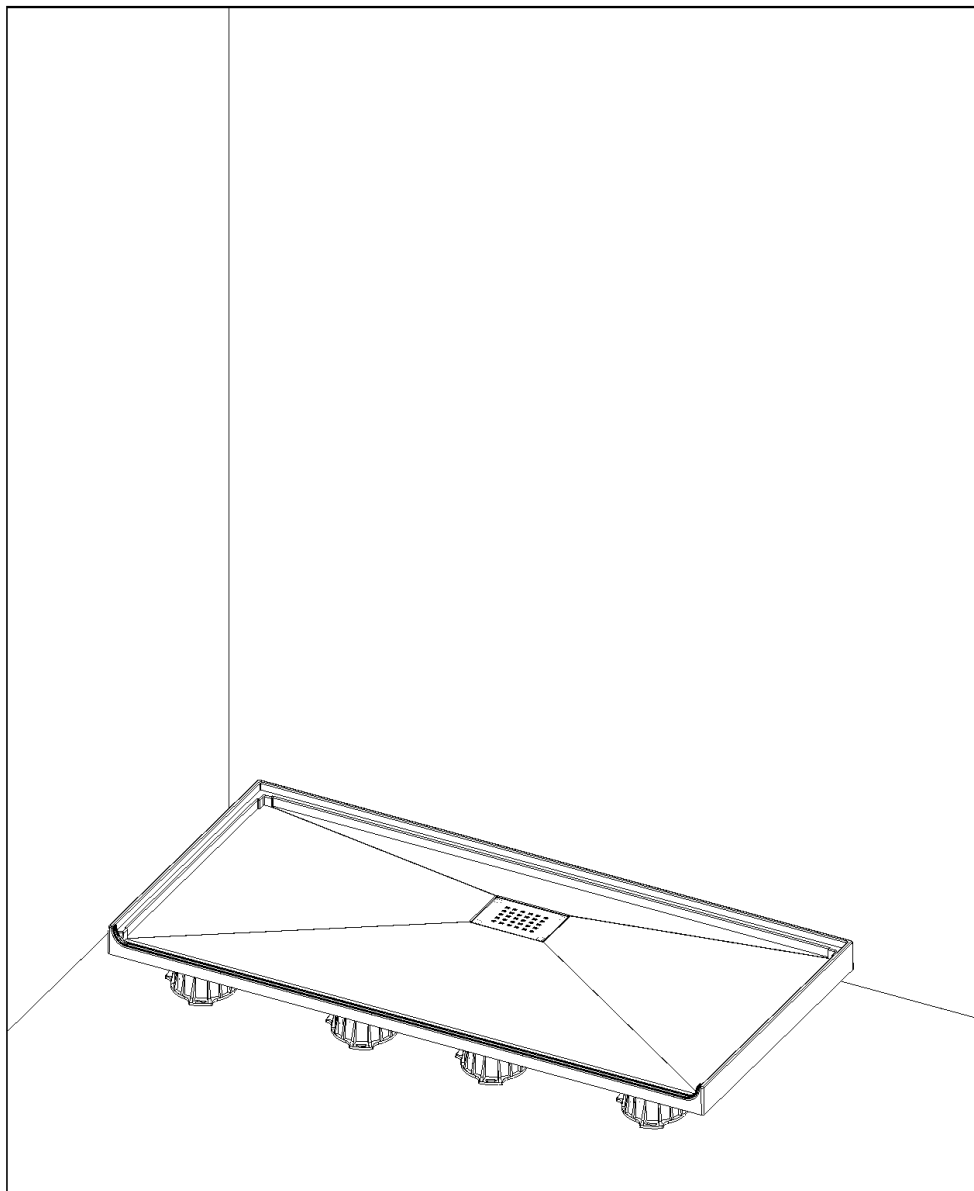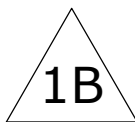


1C

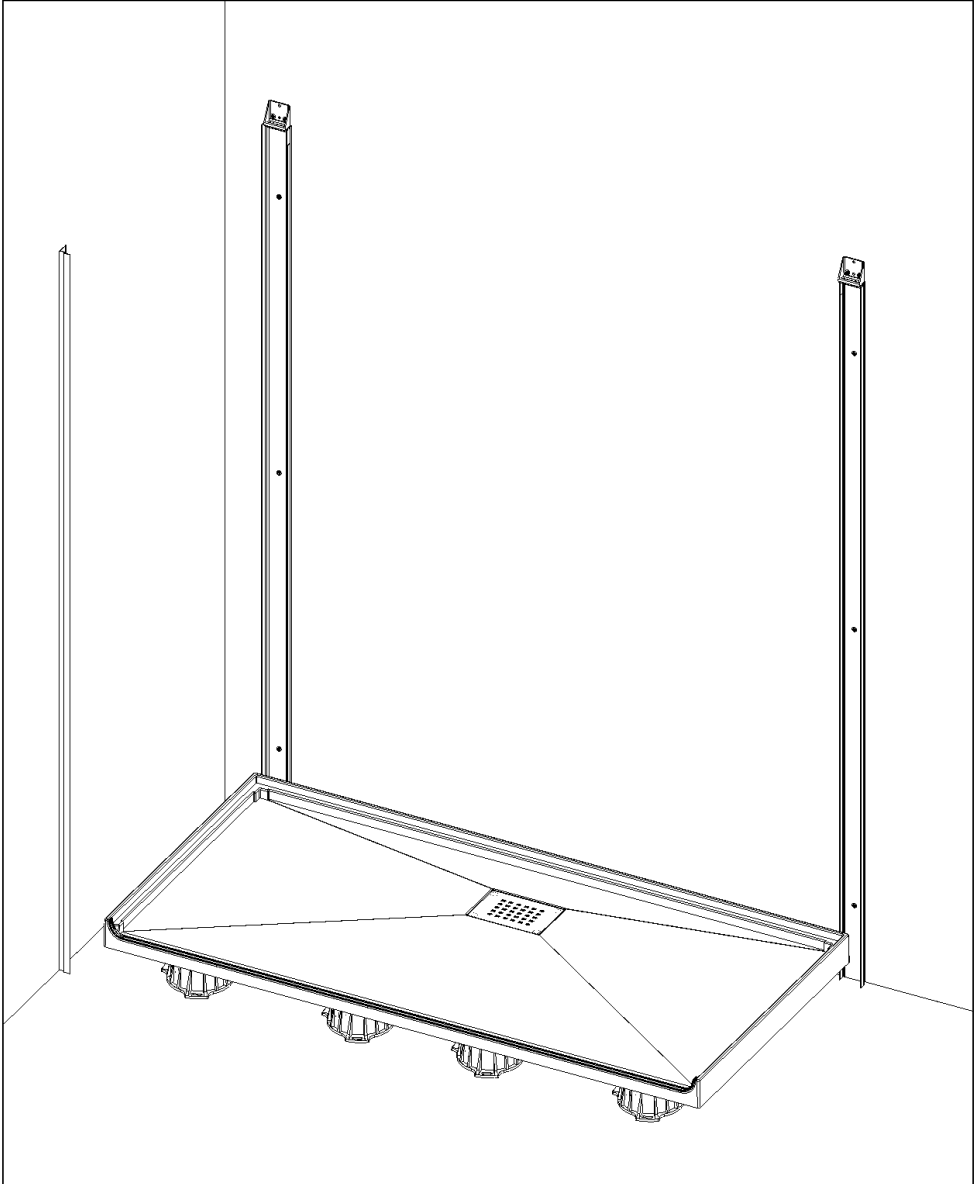


2

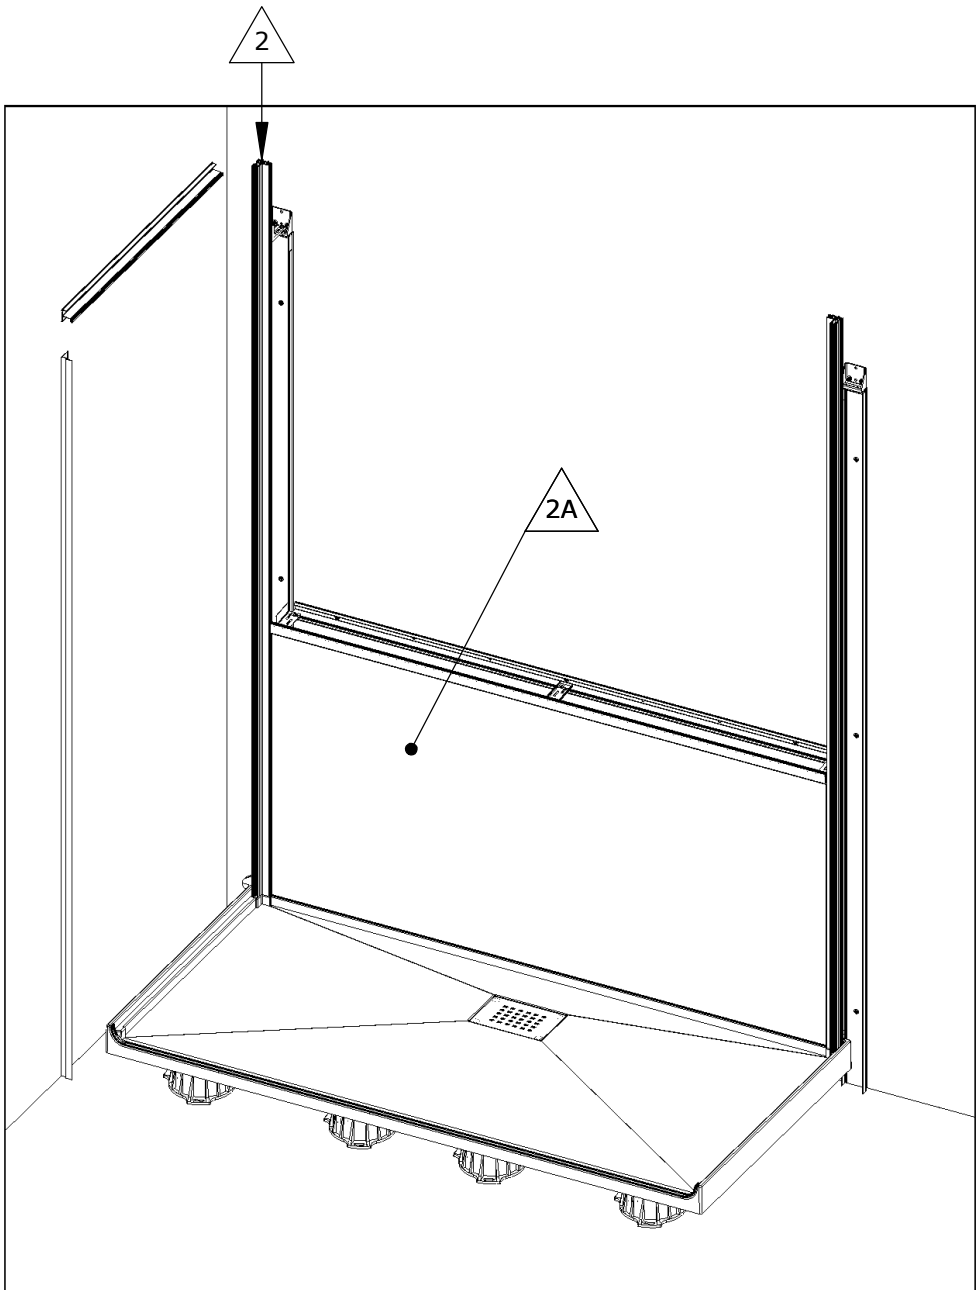


2

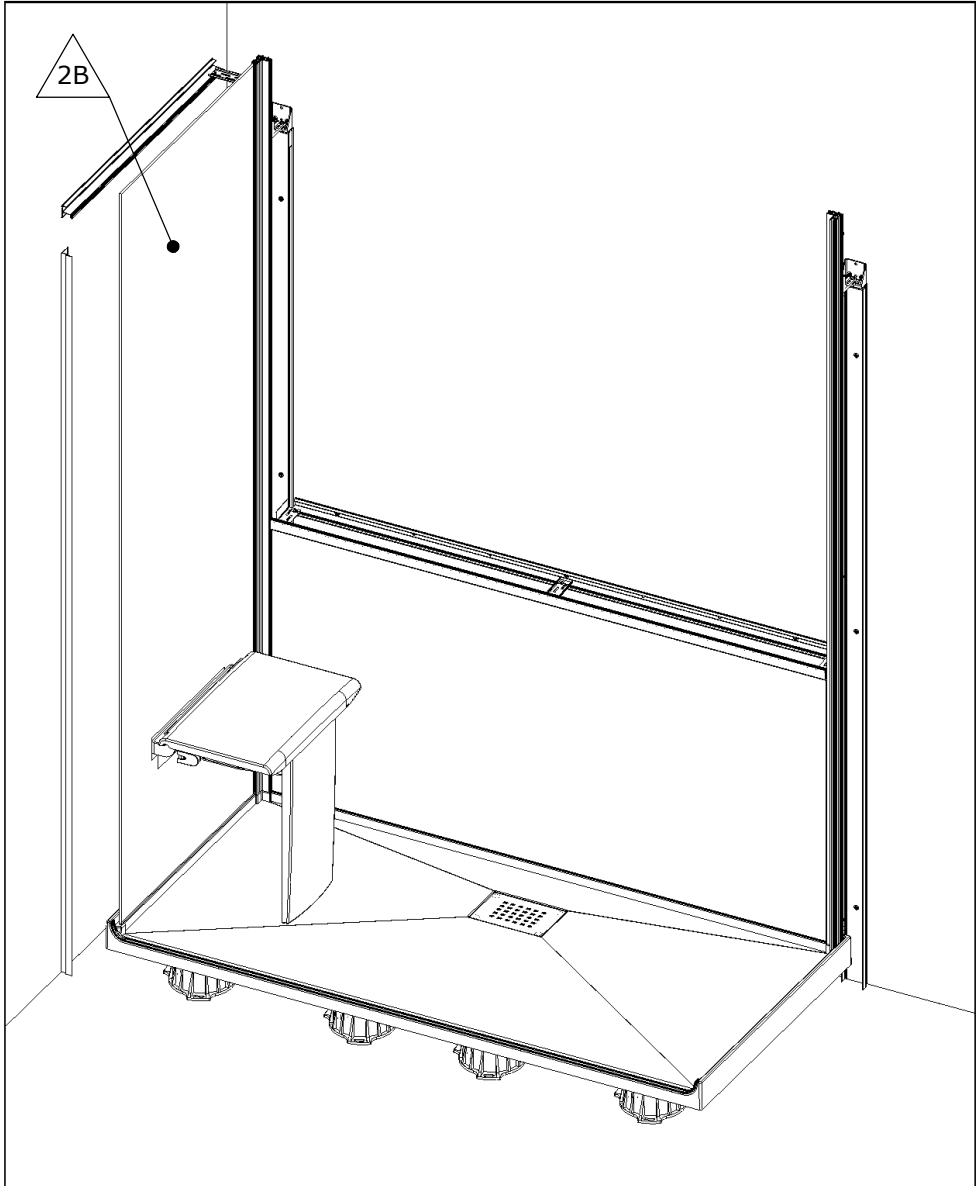


3

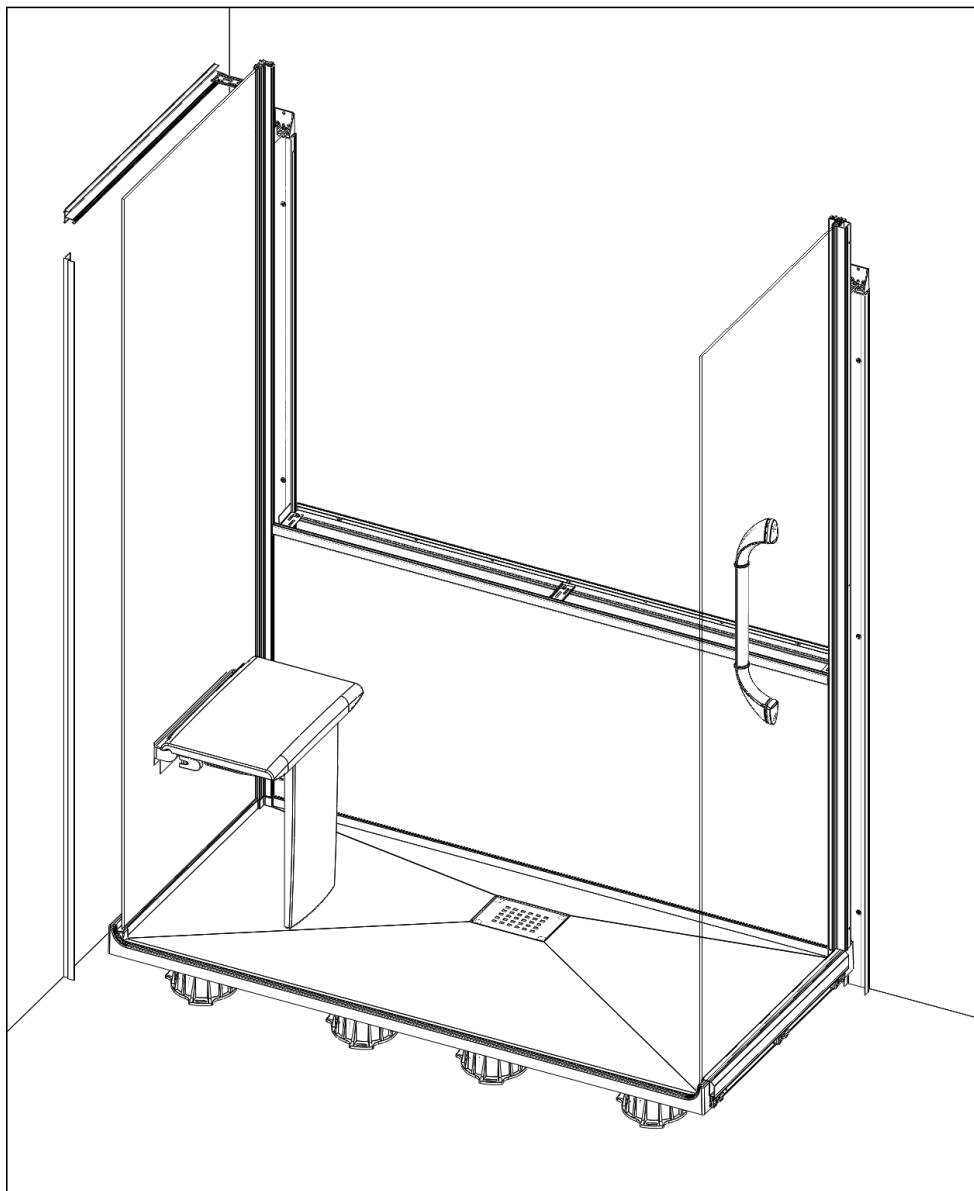


4

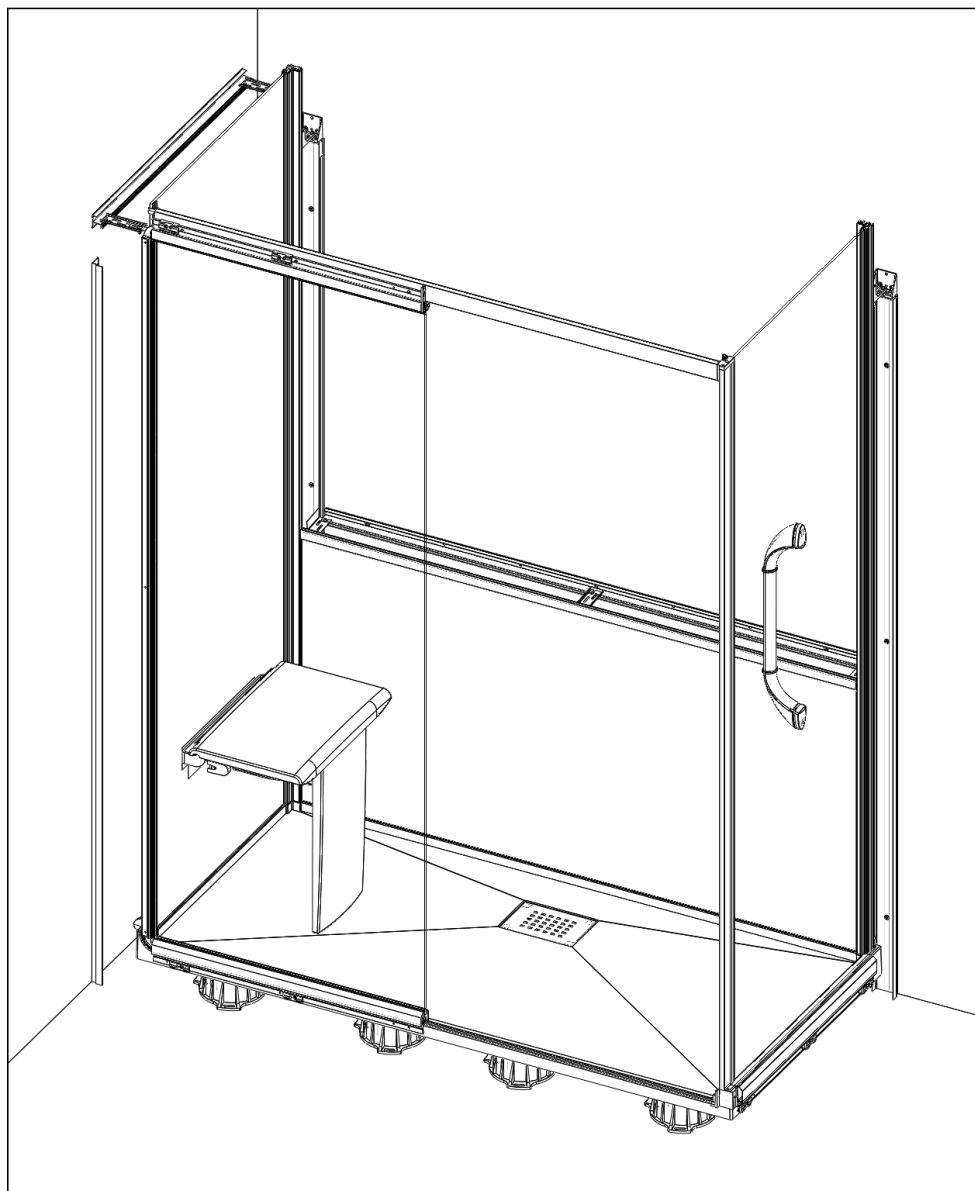


5

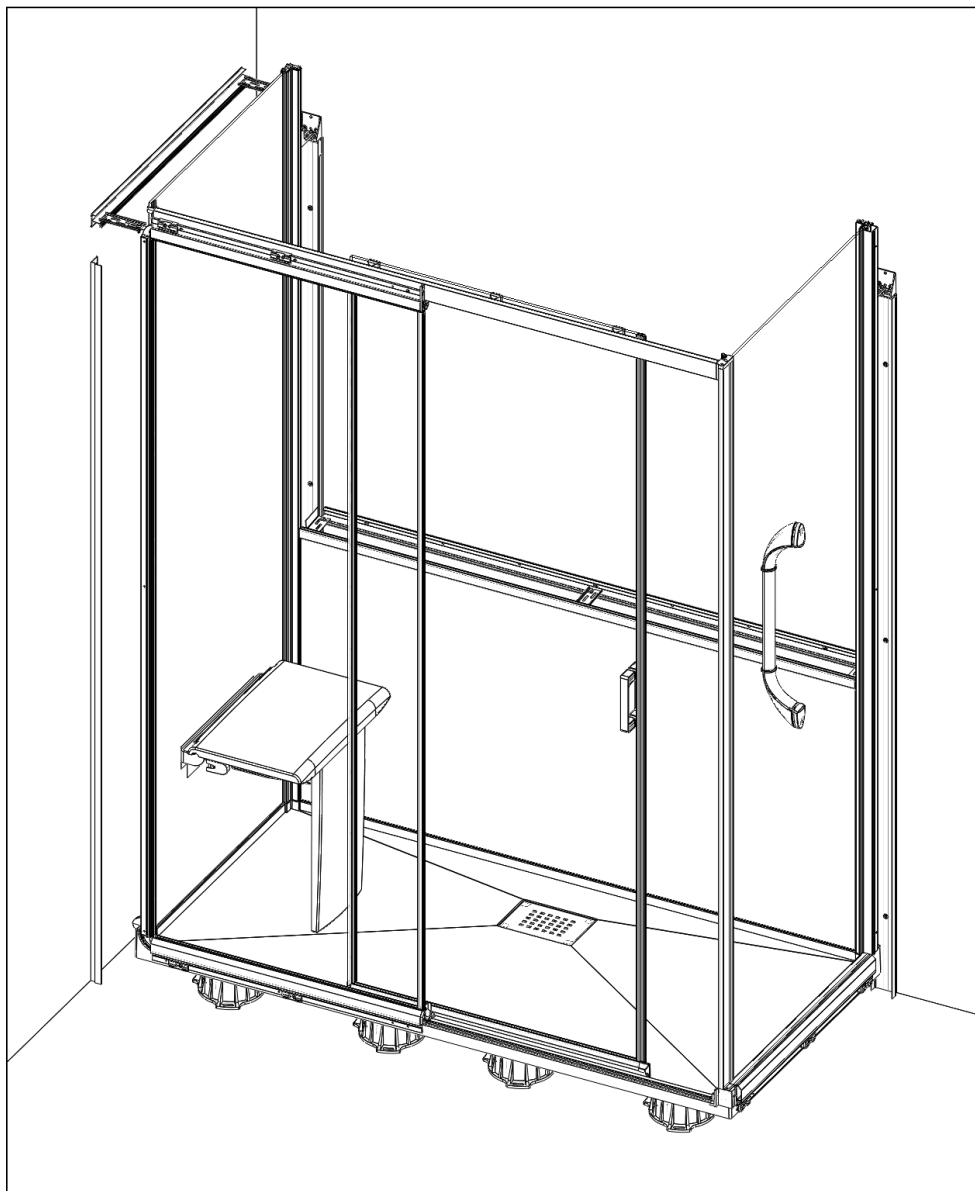

6

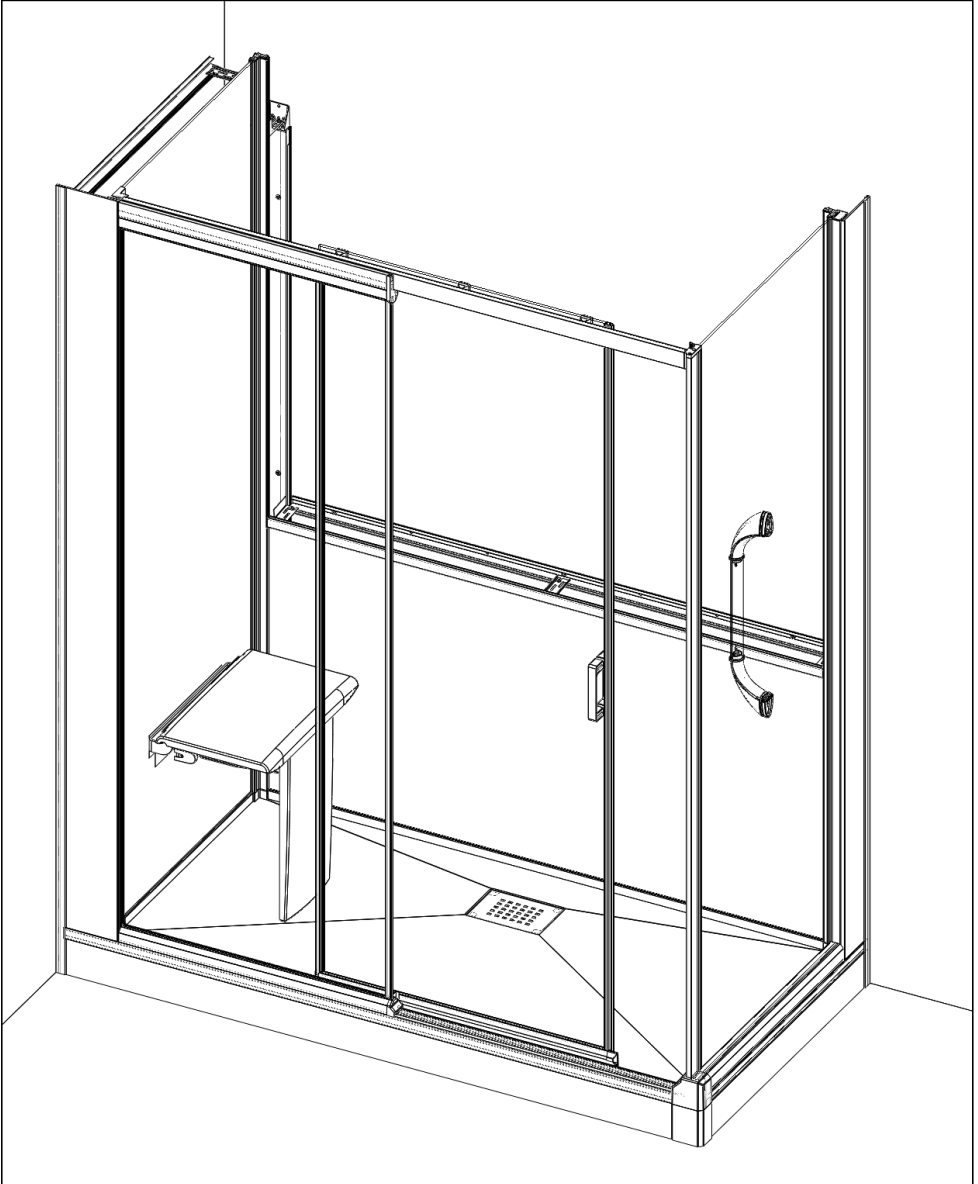


7

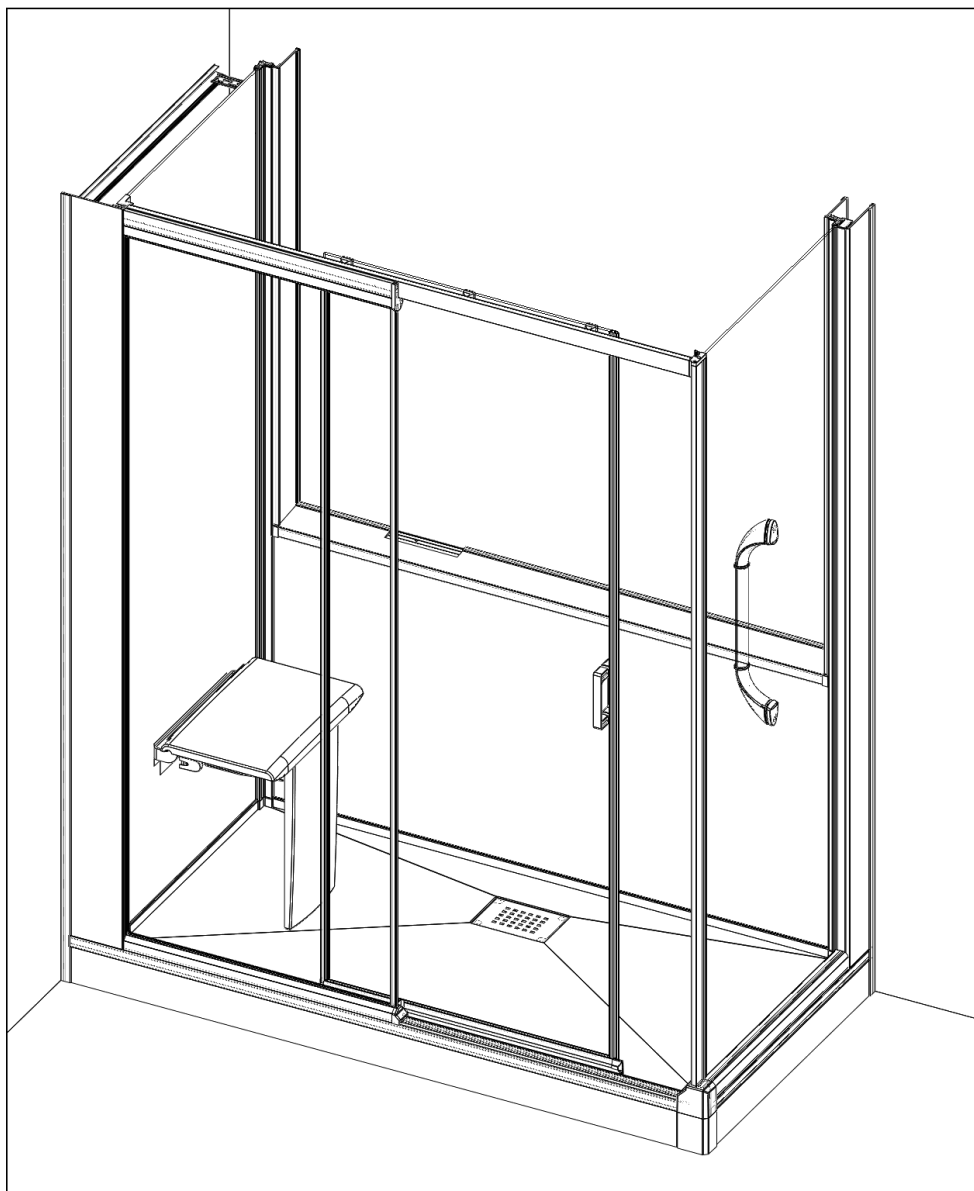


8


- Voir notice concernée ● See installation instructions required
- Ver manual adecuado ● Vedere manuale appropriato
- Zie montage-instructies ● Siehe betreffende Anleitung

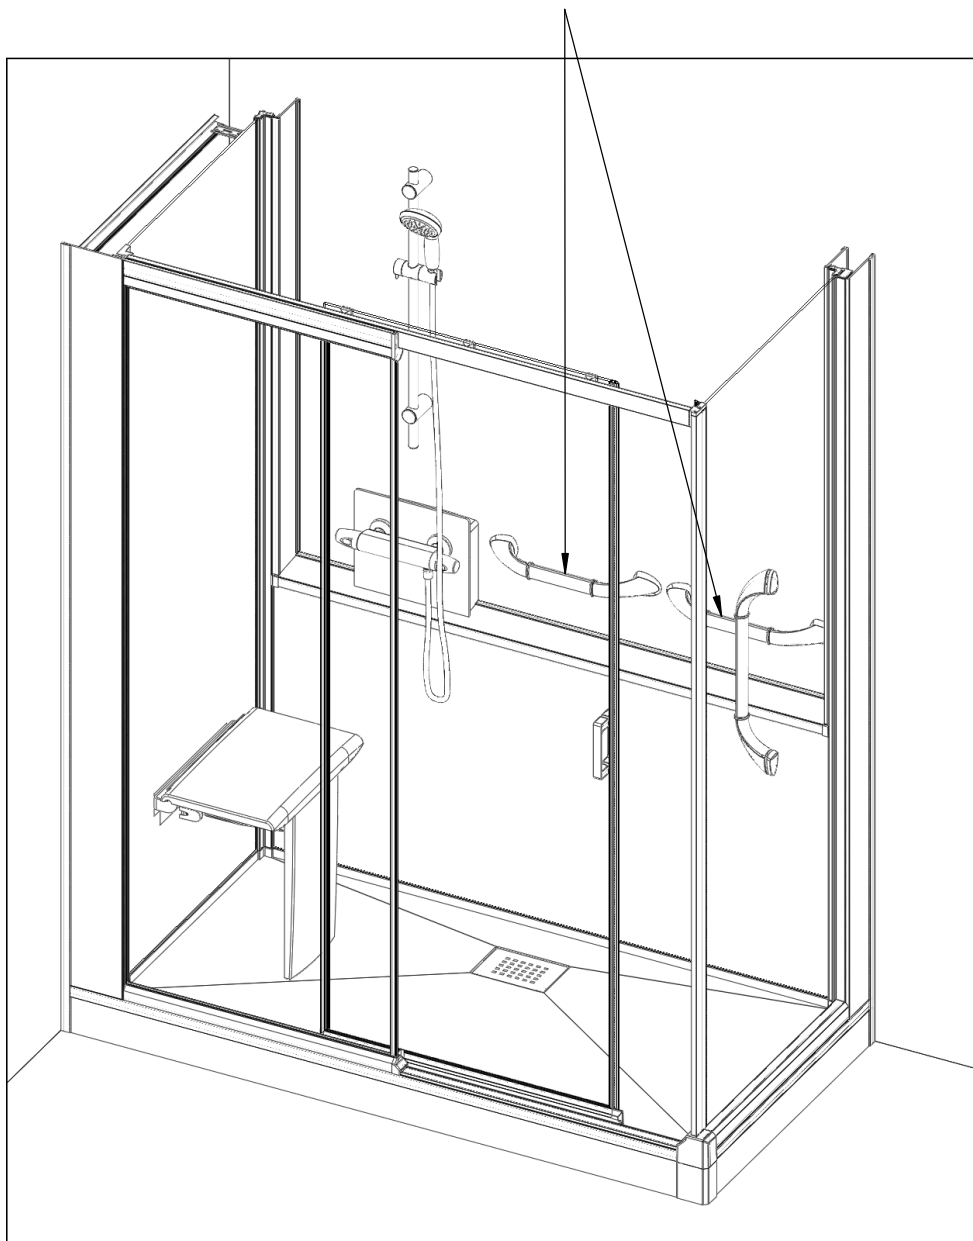

- Zone de décaissement pour un montage de receveur sans pieds
- GB Area required for the installation of the tray without feet
- E Zona rebajada para la instalación del plato sin pies
- I Zone necessarie per un montaggio del piatto senza piedi
- NL Aflooplegebied voor de montage van een douchebak zonder poten
- D Freier Raum für Montage der Duschwanne ohne Füße

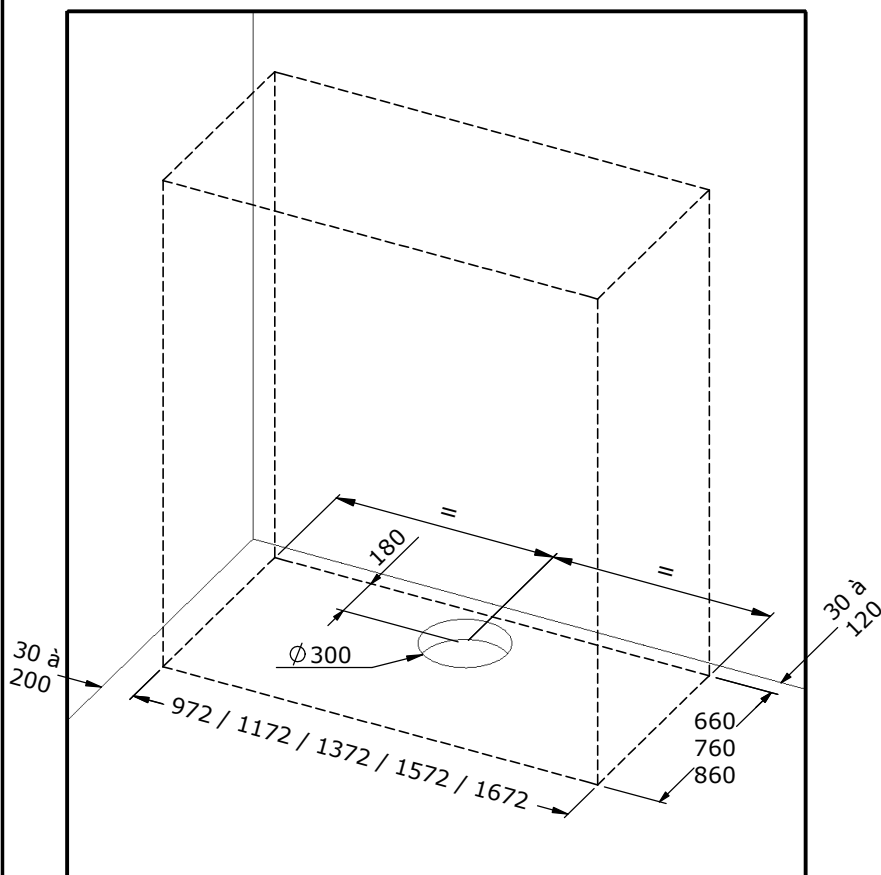

- F Cotes en mm ●GB Dimensions in mm ●E Cotas en mm
- I Quote in mm ●NL Afmetingen in mm ●D Maße sind in mm angegeben

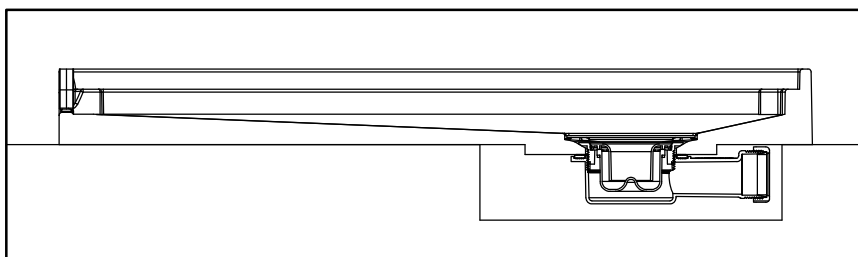



SERVICE APRÈS-VENTE AFTER-SALES SERVICE

FRANCE

+33 (0)2 40 21 29 45

UK

+44 (0)20 8842 0033

IRELAND

+353 04697 33102

DEUTSCHLAND

+49 (0) 6074 / 30928 0

ITALIA

+39 (0382) 6181

ÖSTEREICH

+43 1 710 60 70

SUISSE/SCHWEIZ

+41 (0)32 631 04 74

ESPAÑA

+34 93 544 60 76

NEDERLAND

+31 475 487 100

BELGIQUE/BELGIË

+31 475 487 100

РОССИЯ

+7 495 258-29-51

PORTUGAL

+351 219 112 785